





## DLH400D Daylight Light Head

A fixture for single ended 400 W daylight metal halide lamps with unrivaled focusing range and unequalled light quality. Can be operated at 575 W with the same lamp when used in conjunction with the Dedolight DEB400D electronic ballast. Matches optical design of the DP400 projection attachment for flawless performance.

### Technical Data: DLH400D

- Focus Angle: 50° – 4.5°
- Focus Intensity: 1 : 20
- Focus Scale: Indicates current angle of beam
- Weight: 4400 g (9.7 lb.)
- Lamp: DL400HR 400 W single ended, Hot Restrike
- Cable length: 7 m (23')
- Mounting: 16 mm (5/8") receptacle and 28 mm (1 1/8") stud
- Safety: Safety switch prevents operation when access door is open
- UV: Extremely low UV emission
- ON/OFF: On/Off push buttons located on both head and ballast for ease of operation

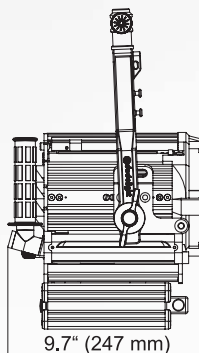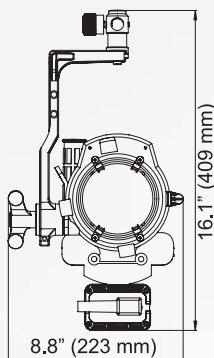

## DEB400D Flicker Free Ballast

Utilizing the latest technology, the DEB400D electronic flicker free ballast was designed to power the Dedolight 400D, the DedoPAR and the Dedolight 400S. Light weight yet rugged, small yet powerful with every conceivable feature you would want.

- Dimmable (40 %)
- Boost position for added light output (575 W)
- Active power factor correction
- Auto start mode on request
- Over voltage, overload, overheat and short circuit protection
- Automatic input voltage adjustment from 90 – 260 V AC

### Technical Data: DEB400D

- Weight: 3400 g (7.5 lb.)
- Wattage: 400 W / 575 W
- Input voltage: Automatic sensing 90 – 260 V AC
- Mounting: May be attached to light stand using DEB400H mounting bracket (not included)
- Safety: Over voltage, overload, overheat and short circuit protection
- Indicators: Three LED status indicators (ready, lamp, heat)
- Dimming range: 40 %

